

Rapid Air Corporation Operating Instructions

Cabinet Reel Rev. 1

4601 Kishwaukee Street, Rockford, IL 61109
Tele. 815-397-2578 * Fax 815-398-3887


OPERATING INSTRUCTIONS CABINET REEL

(Revision 1—2/94)

INSTALLATION


1. The machine that you have just received is fully assembled and ready to be put into position. Due to shipment vibration the machine should be checked to be sure all screws and bolts are tight and that all electrical components are in place inside cabinet. Visually inspect the machine for damaged parts due to shipment. If the machine was damaged in shipment, contact the carrier first to report the damage, and then Rapid-Air.
2. Install the machine on a level surface with sufficient clearance for loading and unloading coils.
3. The machine is completely self-contained and need only be plugged into a 20 amp, 120 volt, 60 HZ outlet. If an extension cord is used as the source to the machine, it should be a minimum #12 gauge wire to keep the voltage loss down and for electrical safety reasons.

See Drawing Below (fig. Man 27)

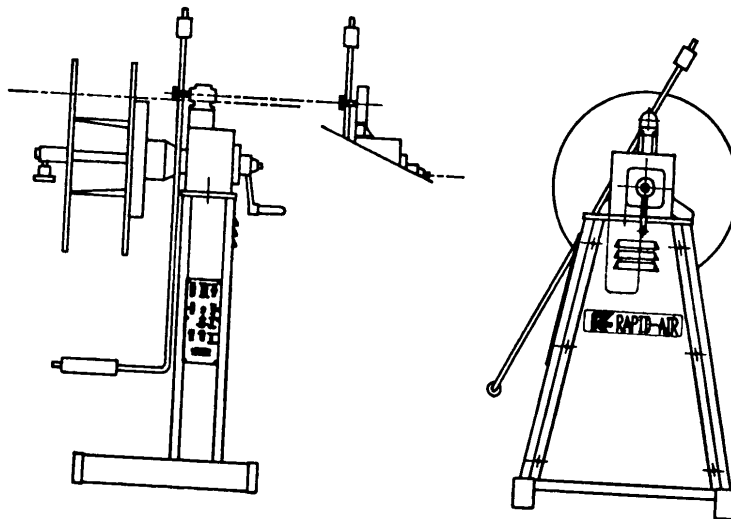

The main control unit is located behind the side access cover. Fig. Man 28 is an illustration of the layout of the control panel. This diagram lists all the components and the approximate location of each that could be used for troubleshooting the machine if a problem should occur. The reel is shipped with—120 VAC (1 phase) input. Visually check all electrics before starting the reel.

Fig. Man 28

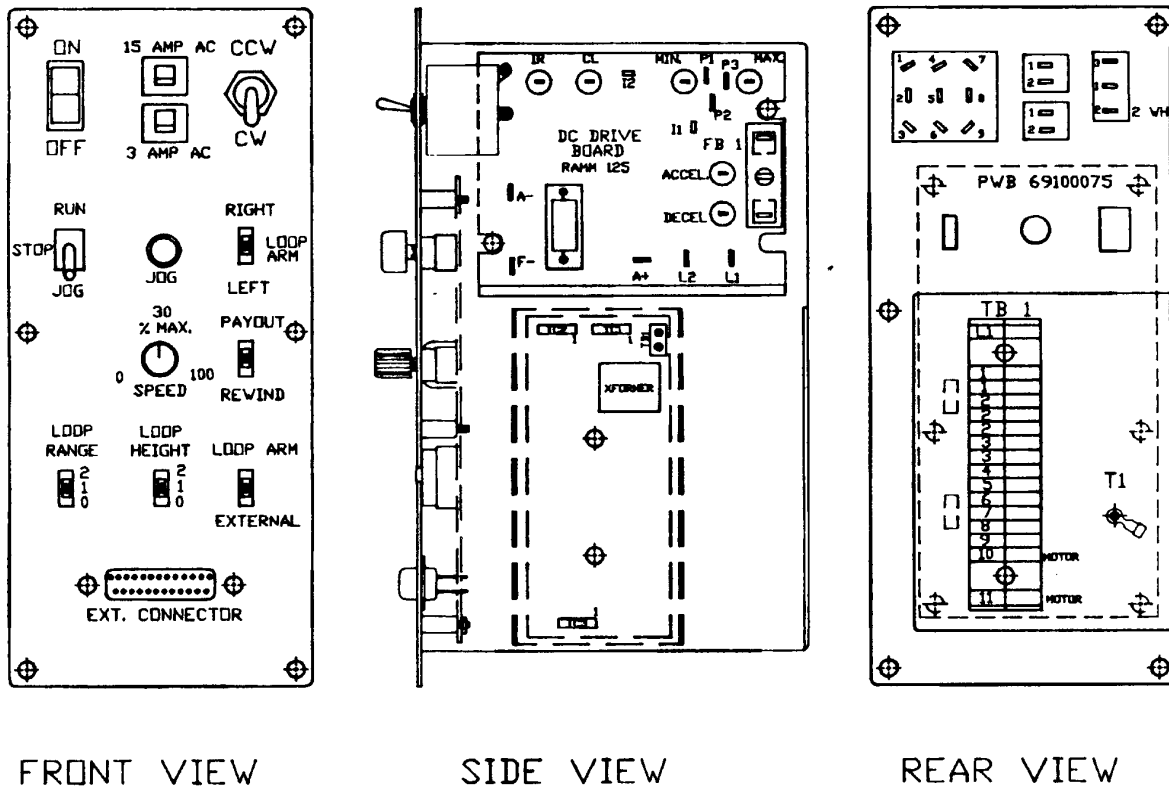

Mechanical Operating Procedure

To Load or Unload a Coil Ring

- A) If your reel has a fixed center shaft go to Step - 1
- B) If your reel has an adjustable center shaft go to Step - 2

Step 1:


Release and remove the outer coil retainer from the shaft. Load or unload the coil ring. Replace and secure the outer coil retainer. The reel is now ready for production.

Step 2:

Release and remove the outer coil retainer from the shaft. If unloading, adjust the centering arms to a position that they have released the coil. Remove the coil ring. If loading, place the coil ring on the adjustable centering arms, adjust the centering arms until they are tight on the coil. Replace and secure the outer coil retainer. The reel is now ready for production.

The dancer arm was designed to operate from either side of the reel. The main reason for this was so the reel controls could be lined up on the same side as the punch controls.

To switch the dancer arm to operate on the opposite side that it is currently located on, first remove the counter weight if equipped with one, then turn the locking knob to disengage the lock on the dancer arm hub. Remove the dancer arm and relocate it to the other side. Turn the hub 60 degrees and insert the dancer arm into the slot. Set to desired position. Turn the locking knob until tight on the dancer arm. Then replace counter weight, if so equipped. Switch the loop arm selector slide switch from left to right side or right to left side position as required. The dancer arm is now ready for production running.

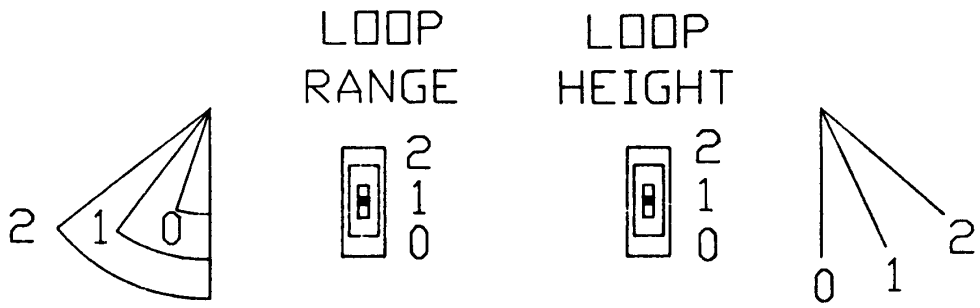


DANCER ARM LOOP HEIGHT ADJUSTMENT

Three different loop sensing arm operating positions are selected manually during set-up. By selecting the higher number, the zero point of the dancer arm is raised from its rest position to the angle shown (as indicated 0-2). The dancer arm will move from rest position to the angle selected before the pallet reel begins to rotate.

DANCER ARM LOOP RANGE FUNCTION



30 degree— Loop sensing arm travels through a full 30 degree arc to vary turntable rotation speed from slow to full speed as controlled by % speed pot.

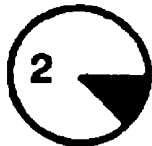

20 degree— Loop sensing arm travels through a 20 degree arc to vary turntable speed from slow to full speed as controlled by % speed pot.



10 degree— Loop sensing arm travels through a 10 degree arc to vary turntable rotation speed from slow to full speed as controlled by % speed pot.

START UP PROCEDURE

Prior to applying power to the machine the operator should review all the controls on the machine. A brief summary of the controls is listed below.

MAIN CONSOLE & CONTROLLER

The main control console & controls are mounted on the end of the cabinet. Located on the face of the console are eight switches, one potentiometer, pushbutton and 2 reset switches, which are explained below.

1. DIRECTIONAL CONTROL - (CW/CCW) - CAUTION: DO NOT REVERSE MOTOR WHEN THE REEL IS RUNNING! - The direction control switch selects the direction the reel will turn, clockwise or counterclockwise. Once switched there is a time delay before resuming normal operation. This is a built in safety for the machine.

2. % SPEED POT - The % speed pot adjusts the maximum speed that the reel will rotate and should be set to maintain a constant feed rate.

3. ON/OFF SWITCH - This illuminated switch is the main power switch for the controller. It must be "ON" for the machine to function.

4. PAYOUT/REWIND SWITCH - The payout/rewind switch selects whether the dancer arm will cause the reel to function at a low speed at the bottom of the arc and increase the reel speed as the arm raises (Payout); or cause the reel to function at a low speed at the top of the arc and increase the reel speed as the arm lowers (Rewinds).

5. RUN/STOP/JOG SELECTOR SWITCH - The switch selects between Run & Jog. If in Run and the control arm is moved the coil plate will turn. If in Jog, the Jog button has to be depressed for the coil plate to turn.

6. JOG BUTTON - Used for intermittent movement of the coil plate, mainly for set up, speed is adjusted on the 69100076 board by potentiometer R3 on the electrical control sup panel.

7. DANCER ARM LOOP HEIGHT & RANGE ADJUSTMENT -

a. Loop Range - The loop range switch adjusts the amount the dancer arm will travel to provide the full range of speed of the pallet reel.

b. Loop Height - This switch is used for setting the start position of the control arm. The setting determines when the reel will start turning. Each position will move the operating angle of the arm so that top-to-bottom travel is adjusted to accommodate specific material and loop height requirements.

8. LOOP ARM LEFT/RIGHT SWITCH

The loop arm left/right switch selects which side of the reel the dancer arm is controlling from. If the switch is in the wrong position the reel will run continuously at full speed.

9. LOOP ARM/EXTERNAL SWITCH

This switch selects either dancer arm (internal) or “D” connector (external) speed control functions.

10. RESET BUTTONS

- A. 15 amp - This is the main circuit breaker for the reel.
- B. 3 amp - This is the circuit protection for the “D” connector. Any shorts or over loads would trip this breaker.

11. REMOTE INTERFACE PORT “D” CONNECTOR

This connector is used to communicate with external loop control equipment.

CAUTION: Never plug any type of computer or non Rapid-Air equipment into this plug or severe damage will result. Always consult with the factory when installing new external controls for compatibility and wiring information.

ELECTRICAL COMPONENT DESCRIPTION

69100034 board - proportional control board

69100076 board - component interface board

PC control board (RAMM) - D.C. motor board

REEL SPECIFICATIONS AND MAINTAINCE

CAPACITY

| SERIES | 20 | 30 | 40 | 50 |
|-----------------------------|---------------|----------------|----------------|----------------|
| COIL CAPACITY | 75 LBS | 150 LBS | 250 LBS | 500 LBS |
| STANDARD STOCK WIDTH | 4" | 4" | 6" | 6" |
| MAX COIL O.D. | 18" | 24" | 30" | 36" |
| | 24" | 30" | 36" | 48" |
| | 30" | 36" | | |

ELECTRIC MOTORS

R20 to R30 are furnished with 1/4 hp, 2500 rpm permanent magnet d.c. motors.

R45 to R58 are furnished with 1/2 hp, 2500 rpm permanent magnet d.c. motors.

All motors are 90 V.D.C. unless otherwise specified.

All brushes on the motors should be checked every 1500 to 2000 hours.

LUBRICATION

Gear transmission oil - Use Mobil 600W cylinder oil or equivalent. Fill to bottom edge of the oil fill hole. The oil capacity of the gear box is as follows:

| | |
|-----------|--------|
| R20 | 4 oz. |
| R30 & R40 | 12 oz. |
| R50 | 18 oz. |

The oil should be changed every 1000 hours.

TROUBLE SHOOTING GUIDE

MAIN SWITCH ON BUT NOT LIT

1. CB tripped
 - a. Reset CB
2. Unit not plugged into main power.
 - a. Plug into main power source.
3. No power in incoming line.
 - a. Check outlet.
 - b. Check power cord.
4. Loose wiring
 - a. Check terminals and connections.

MOTOR CREEPS IN STOP POSITION

1. R1 & R3 pot on 69100034 board not correctly adjusted.
 - a. Readjust pots so table stops. Call factory.

UNIT TURNS BUT WON'T JOG

1. Selector switch not in jog position.
 - a. Select jog.
2. Jog pot on 69100076 board not adjusted correctly.
 - a. Adjust pot. Call factory.
3. Maximum speed pot on Ramm board set too low.
 - a. Adjust pot.

UNIT ON BUT MOTOR WON'T RUN. (ARMATURE VOLTAGE PRESENT - ON RAMM BOARD)

1. Check motor wiring
 - a. Replace motor cord or correct motor wiring. Call factory.
2. Check motor
 - a. Worn brushes or motor defective. Call factory.

NOTE: Refer to drawing RA-2 for location of components, sequence check form Ramm board to motor.

UNIT ON BUT MOTOR WON'T RUN. (NO ARMATURE VOLTAGE ON RAMM BOARD)

1. Selector switch not in run position.
 - a. Turn selector switch to run position.
2. If running with a dancer arm control.
 - a. Check that the external/loop arm switch is in the loop arm position.
3. If running with external control.
 - a. Check that the external/loop arm switch is in the external position.
4. Height switch setting too high.
 - a. Set height setting to "0".

5. Percent speed pot set too low.
 - a. Adjust percent speed pot to 100%.
6. Fuses blown.
 - a. Check fuses & circuit breaker.
7. No AC voltage at DC drive board.
 - a. Check wiring.
8. Check Signal voltage between P2 to I2 on DC drive.
0-6 VDC—Ramm
0-9 VDC—Regen Drive
while moving dancer arm.
 - a. If there is a signal, check continuity between I1 & I2.
If no continuity, replace D.C. drive or call factory.
9. Check line voltage input of 69100034 board, 120 VAC, TB-1
 - a. Check wiring. Call factory.
10. Check pico fuse 69100034 board (f1).
 - a. Replace fuse, 1 amp pico fuse—call factory.
11. Check for 0—12 VDC between pin #1 (+V) and pin #2 (GND) of panduit connector TC3 on board #69100034.
 - a. If no voltage present call factory.
12. Check for DC voltage between pin #6 (V0) and pin #2 GND of panduit connector TC#, on board #69100034, while moving the dancer arm from minimum to maximum position.
 - a. If voltage is present, turn power off and check the ribbon cable connections between panduit connector #TC3 of 69100034 board and panduit connector #TB-4 of 69100076 board and panduit connector #PT3 of 69100053 board. This should be a continuity check for tight connections. Call factory for assistance.
 - b. If voltage is not present move on to step 12.
13. Check voltage between pin #5 of TB-6 & pin #3 of TB-5 on 69100076 board while moving the dancer arm from minimum to maximum position.
 - a. If voltage varies 2.5-4 volt from minimum to maximum position, the dancer arm pot is OK, but the 69100076 board could be defective. Call factory.
 - b. If voltage does not vary when moving the dancer arm from minimum to maximum position—call the factory for assistance.

RAPID-AIR CORPORATION

RAMM SOLID STATE DC MOTOR SPEED CONTROL

SAFETY WARNING—PLEASE READ CAREFULLY

This product should be installed and serviced by a qualified technician, electrician or electrical maintenance personnel familiar with its operation and the hazards involved. Proper installation (see instruction information which accompanies product), which includes wiring, mounting in proper enclosure, fusing or other overcurrent protection and grounding, can reduce the chance of electrical shocks, fires or explosion in this product or products used with this product, such as electric motors, switches, coils solenoids and/or relays. Eye protection must be worn when working with control under power. This product is constructed of materials (plastics, metals, carbon, silicon, etc.) which may be a potential hazard. Individual material safety data sheets (MSDS) are available upon request. Proper shielding, grounding and filtering of this product can reduce the emission of radio frequency interference (RFI) which may adversely affect sensitive electronic equipment. If information is required on this product, contact our factory. It is the responsibility of the ultimate user of this product to read and comply with this safety warning. (SW effective 1/89)

IMPORTANT

YOU MUST READ THESE INSTRUCTIONS BEFORE OPERATING CONTROL

1. Be sure AC line voltage corresponds to control voltage.
2. Install the correct Plug-In Horsepower Resistor according to armature voltage and motor horsepower.
3. Recheck connections: AC line to L1 and L2; armature to A+ and A- and field (Shunt motors only to F+ and F-.) (Note: If motor runs in improper direction, interchange armature leads.)
4. Install proper AC line fuse and armature fuse as required.
5. Nominal trimpot settings are as follows (expressed in % of full CW rotation):

TABLE 1: NOMINAL TRIMPOT SETTINGS

| | |
|---------------------------|---------------------------------|
| MIN (minimum speed): 15% | CL (current limit/torque): 65% |
| MAX (maximum speed): 65% | ACCEL (acceleration start): 20% |
| IR (IR compensation): 25% | DECEL (deceleration stop): 20% |

PLUG IN HORSEPOWER RESISTOR

A Plug-In Horsepower Resistor must be installed to match the RAMM to the motor horsepower and voltage. See table 2 for the correct value. Plug-In Horsepower Resistors are stocked by your distributor.

TABLE 2. PLUG IN HORSEPOWER RESISTOR CHART*

| MOTOR HORSEPOWER RANGE ** | | Plug-in Horsepower Resistor Resistance Value (ohms) | Rapid-Air P/N |
|--------------------------------|-----------------------------|---|---------------|
| Armature Voltage 90-130 VDC | Armature Voltage 180 VDC | | |
| 1/4 | 1/2 | .05 | 69100529 |
| 1/2 | 1 | .025 | 69100530 |
| 3/4 | 1-1/2 | .015 | 69100534 |
| 1*** | 2*** | .01 | 69100531 |

* Motor horsepower and armature voltage must be specified when ordering so that proper resistor will be supplied.

** For overlapping motor horsepower range use lower value Plug-In Horsepower Resistor.

*** Auxiliary heatsink must be used to achieve HP rating.

INTRODUCTION

The **RAMM** Full Wave Solid State DC Motor Speed Control represents the latest state of the art design achievable through modern technology.

Features Include:

Integrated Circuitry

Used to control and amplify command and reference levels with both closed and open loop feedback to provide superior motor regulation. (Speed changes due to load, line voltage, or temperature variations are held to minimum levels).

High Quality Components

Selected and tested for proven dependability.

Transient Protection

Used to prevent failure of the power bridge circuit caused by voltage spikes on the AC line.

High Reliability

When used in accordance with instructions in this manual, the RAMM will provide years of trouble free operation.

A. Initial Setup and Wiring

i. General Instructions

1. Install proper size Plug-In Horsepower Resistor.
(see table 2)
2. The **RAMM** can be connected to a standard 120V or 240V 50/60 Hz AC line (be sure the AC input voltage corresponds to the control voltage rating and the motor rating). (e.g. 90-130 VDC motor on 120VAC and 180 VDC motor on 240 VAC)
3. Follow the recommended supply wire sizes as per table 3.
4. Follow the NEC and other electrical codes that apply.

CAUTION: SEPARATE BRANCH PROTECTION MUST BE PROVIDED ON 240V CIRCUITS.

5. Connect control in accordance to connection diagram.

TABLE 3. MINIMUM SUPPLY WIRE SIZE REQUIREMENTS

| MAX. MOTOR AMPS (DC AMPS) | MAX. MOTOR HP 90V | MAX. MOTOR HP 180V | MINIMUM WIRE SIZE (AWG) Cu only | |
|------------------------------------|----------------------------|-----------------------------|------------------------------------|----------------------|
| | | | MAX. MOTOR RUN | MAX. MOTOR RUN |
| 6.0 | 1/2 | 1 | 16 | 14 |
| 12.0 | 1 | 2 | 14 | 12* |
| 16.0 | 1 1/2 | 3 | 12 | 12 |

*Maximum recommended wire size

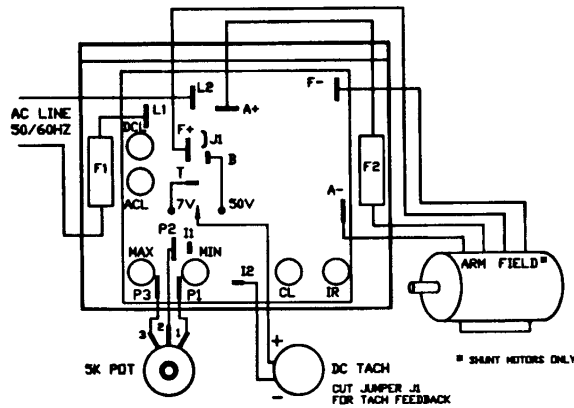


Fig. 1. Basic RAMM Connection Diagram

CAUTION: Do not bundle potentiometer connections (P1, P2, P3) and inhibit connections (I1, I2) with AC line or motor wires.

B. VOLTAGE FOLLOWING. All models can be controlled with an isolated analog reference voltage (0-6VDC) in lieu of the main speed potentiometer. The voltage is connected to P2 (+) and F-. The control output voltage will linearly follow the input voltage. The source impedance of the input should be 10K ohms or less. The Min trimpot can be used to provide an offset speed. If an offset is not required adjust the Min to 0+ or 0- speed as desired. The Max trimpot is rendered inoperative in the voltage following mode. Use auxiliary trimpot to limit the control range. If the input signal is not isolated, or is a current signal (4-20ma), the RA-SI240D) Signal Isolator must be used. It will allow direct connection to process controllers and microprocessors.

CATUION: 1. The voltage feeding P2 and F- must be isolated form the AC line. Do not ground P2 or F- to set up a zero ground reference.
 2. Do not bundle signal wires to P2 and F- with AC line motor connections. If signal wires are over 18", use shielded cables.

C. FUSING. The RAMM has provision for a built in AC line fuse and armature fuse. The AC line fuse protects the control against catastrophic failure- if the fuse blows, the control is mis-wired, the motor is shorted or grounded, or the RAMM control is defective. The armature fuse provides overload protection for the motor and control. Choose the proper size armature fuse by multiplying the maximum DC motor amps by 1.7. On domestic 240 Volt AC lines, separate branch circuit protection for each line must be used. All fuses should be normal blow ceramic 3AG or ABC or equivalent.

1. AC Line Fuse is chosen according to the maximum rating of the control:
 - 12 AMP fuse for all motors up to 3/4 HP-90V and 1 1/2 HP-180VDC.
 - 25 AMP fuse for all motors 1 and 1 1/2 HP-90v and 2 and 3 HP-180VDC.

1. AC Line Fuse is chosen according to the maximum rating of the control:
 12 AMP fuse for all motors up to 3/4 HP-90V and 1 1/2 HP-180VDC.
 25 AMP fuse for all motors 1 and 1 1/2 HP-90v and 2 and 3 HP-180VDC.
 (Use Buss ABC, Littlefuse 326 ceramic fuse or equivalent.)

2. Armature Fuse can be chosen in accordance with the fuse chart. Note: The armature fuse is calculated based on the approximate full load DC current rating of the motor times a from factor of 1.5. If motor has characteristics not consistent with these approximations, a different fuse value may have to be used. Fuses are available from your distributor.

TABLE 4. ARMATURE FUSE CHART

| 90VDC MOTOR | 180VDC MOTOR | APPROX. DC MOTOR CURRENT (AMPS) | FUSE RATING (AC AMPS) |
|-----------------------------|-----------------|--|-----------------------------|
| HORSEPOWER | | | |
| 1/4 | 1/2 | 2.5 | 4 |
| 1/2 | 1 | 5.0 | 8 |
| 3/4 | 1 1/2 | 7.5 | 12* |
| 1 | 2 | 10.0 | 15 |
| 1 1/2 | 3 | 15.0 | 25* |
| *Also used as AC line Fuse. | | | |

ADJUSTMENTS AND CONTROL FUNCTIONS


WARNING: If adjustments are made under power, insulated adjustment tools must be used and eye protection must be worn.

The **RAMM** has been factory adjusted to provide 0-full speed using the speed control knob. Minimum and Maximum speed trimpots are provided to change the speed from other than 0-full speed. The Acceleration (ACCEL) trimpot is provided to allow for a smooth start over an adjustable time period each time the AC power is applied or the speed pot is rotated. The DE-CEL trimpot controls the amount of ramp-down when the speed pot is adjusted to a lower speed. The Current Limit (CL, or torque output) adjustment is factory set to approximately 1 1/2 times the motor rating. The IR Compensation (IR) is factory adjusted to provide excellent motor regulation under normal operation.

NOTE: In order for the IR comp and CL trimpot settings to be correct, the proper Plug-in Horsepower Resistor must be installed for the particular motor and input voltage being used. Do not attempt to change the settings of the trimpots unless absolutely necessary since they are factory adjusted to near optimum settings.

The following procedure, presented in order of adjustment sequence, should be used when readjusting all trimpot functions.

Fig 2. ACCEL/DECEL TRIMPOT ADJUSTMENT

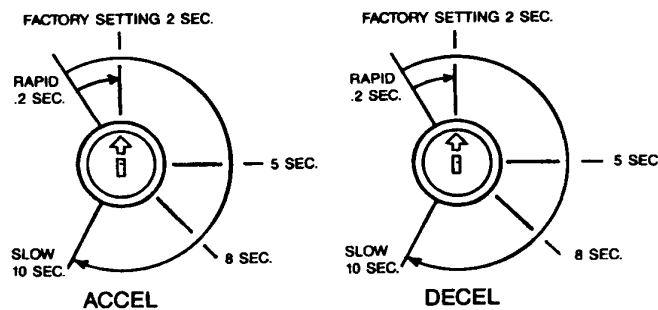

A. Acceleration Start. The ACCEL is factory set at approximately .2 seconds. To readjust to different times, set the knob to the desired position as indicated in Fig 2.

B. Deceleration. The DECEL is factory set to provide a ramp-down time of .2 seconds. To change the ramp-down time, adjust the DECEL trimpot as indicated in Fig 2.

C. Minimum Speed Adjustment. If a higher than zero minimum speed is desired, readjust the minimum speed by turning the speed control knob to zero setting (full CCW position). Then adjust the Min. Speed Trimpot to the desired setting.

NOTE: The min. speed adjustment will affect the max. speed setting. Therefore, it is necessary to readjust the max. speed after the min. speed is adjusted.

D. Maximum Speed Adjustment. Turn Speed Control Knob to full speed (maximum CW position). Adjust max. speed trimpot to new desired setting.

NOTE: Do not attempt to adjust the max. speed above the rated motor RPM since unstable motor operation may occur. For moderate changes in the max. speed, there will be a slight effect on the min. speed setting.

E. Current Limit (CL/Torque Adjustment). CL circuitry is provided to protect the motor and control against overloads. The CL also limits the inrush current to safe level during startup. The CL is factory set to approximately 1.5 times the full load rating of the motor. (CL trimpot is nominally set to approximately 65% of full CW rotation).

To set the CL to factory specifications adjust as follows:

1. Set speed control knob at approximately 30-50% CW rotation.
Set CL trimpot to full CCW position.
2. Connect a DC ammeter in series with the armature lead.
3. Lock shaft of motor (be sure CL pot is in full CCW position).
Apply power and rotate CL pot CW slowly until DC ammeter reads 1.5 times motor rating (do not exceed 2 times motor rating, Max. CW position.)

NOTE: If only an AC ammeter is available, it can be installed in series with the AC line. Follow above instructions; however, set AC amperage at .75 times motor rating.

- F. **IR Compensation Adjustment.** IR compensation is provided to substantially improve load regulation. If the load presented to the motor does not vary substantially, the IR adjustment may be set at a minimum level (approximately 1/4 of full setting). The control is factory adjusted to approximately 3% regulation. If superior performance is desired (less than 1% speed change of base speed from 0 to full load), then the IR comp. Should be adjusted as follows:

NOTES: 1. Excessive IR comp. will cause control to become unstable, which causes motor cogging.
2. For tach feedback applications the IR comp can be set to minimum rotation (full CCW).


1. Set IR comp. trimpot at approximately 25% of CW rotation. Run motor unloaded at approximately 1/3 speed and record RPM.
2. Run motor with maximum load and adjust IR comp. trimpot so that the motor speed under load equals the unloaded speed per step 1.
3. Remove load and recheck unloaded RPM. If unloaded RPM has shifted, repeat procedure for more exact regulation.

The **RAMM** is now compensated to provide minimal speed change under large variations of applied load.

LIMITED WARRANTY—RAMM 125, 225, 225D

For a period of one (1) year from date of original purchase Rapid-Air Corporation will repair or replace without charge devices which our examination proves to be defective in material or workmanship. This warranty is valid if the unit has not been tampered with by unauthorized persons, misused, abused or improperly installed and has been used in accordance with the instructions and/or ratings supplied. The foregoing is in lieu of any other warranty or guarantee expressed or implied, and we are not responsible for any expense (including installation and removal), inconvenience, or consequential damage, including injury to any person, caused by items of our manufacture and/or sale. Some states do not allow certain exclusions or limitations found in this warranty so that they may not apply to you. In any event, Rapid-Air Corporation's total liability, under all circumstances, shall not exceed the full purchase price of this unit.

NOTES
 1) THE SWITCHES AND FUSES AND PROTECTIVE SWITCHING DEVICES CAN BE FOUND ON THE FRONT PANEL OF THE EQUIPMENT. THE FUSES ARE 5 AMP - 250VDC AND 5 AMP - 250VAC.
 2) SWITCH TERMINAL NUMBERS ARE ASSIGNED AND DO NOT APPEAR ON SWITCH BODY.

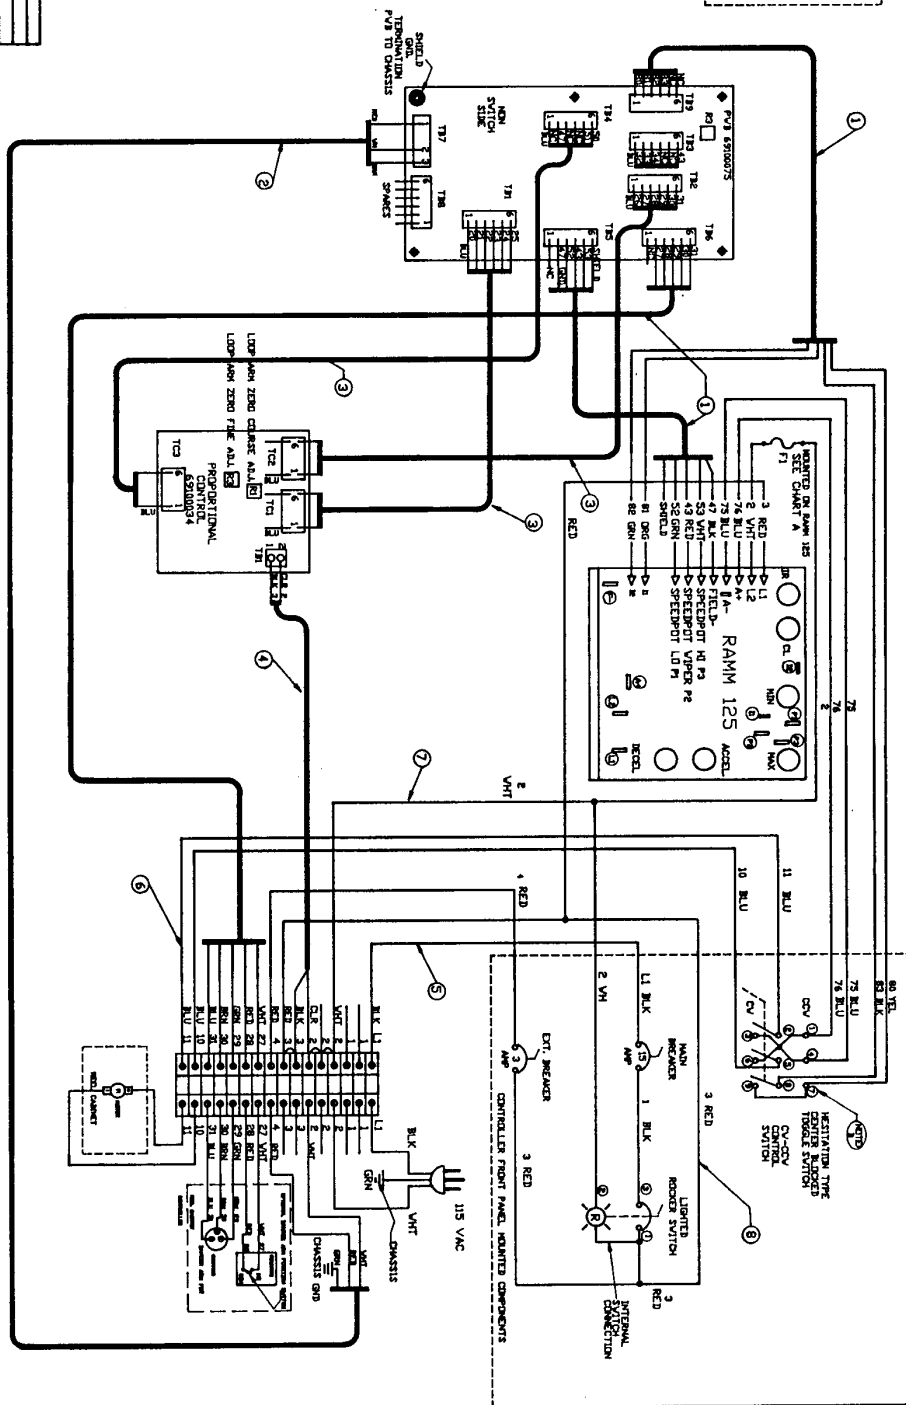

REF. WIRE AND CABLE CHART

| | | | |
|----|----|----|----|
| 10 | 1 | 10 | 10 |
| 9 | 2 | 9 | 9 |
| 8 | 3 | 8 | 8 |
| 7 | 4 | 7 | 7 |
| 6 | 5 | 6 | 6 |
| 5 | 6 | 5 | 5 |
| 4 | 7 | 4 | 4 |
| 3 | 8 | 3 | 3 |
| 2 | 9 | 2 | 2 |
| 1 | 10 | 1 | 1 |

PROPORTIONAL RELAY

| RELAY | WIRE | WIRE | WIRE |
|-------|------|------|------|
| 1 | 10 | 10 | 10 |
| 2 | 9 | 9 | 9 |
| 3 | 8 | 8 | 8 |
| 4 | 7 | 7 | 7 |
| 5 | 6 | 6 | 6 |
| 6 | 5 | 5 | 5 |
| 7 | 4 | 4 | 4 |
| 8 | 3 | 3 | 3 |
| 9 | 2 | 2 | 2 |
| 10 | 1 | 1 | 1 |

WIRING TABLE

| WIRE | WIRE | WIRE | WIRE |
|------|------|------|------|
| 1 | 10 | 10 | 10 |
| 2 | 9 | 9 | 9 |
| 3 | 8 | 8 | 8 |
| 4 | 7 | 7 | 7 |
| 5 | 6 | 6 | 6 |
| 6 | 5 | 5 | 5 |
| 7 | 4 | 4 | 4 |
| 8 | 3 | 3 | 3 |
| 9 | 2 | 2 | 2 |
| 10 | 1 | 1 | 1 |